












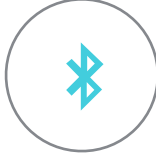

TURBO X SHORTCUTS

Feature:	Buttons:	Notes
Key Lock	 and 	Hold down for 3 seconds to lock all keys. Input light turns RED while engaged. Repeat to unlock.
Switch from Voice to Tone Prompts	 and 	Hold down to toggle between Voice prompts and Tones-only prompts.
Speakerphone: Accept Call		Speakerphone mode: Tap to accept an incoming call.
Speakerphone: Reject/Hang Up:		Speakerphone mode: Tap to reject an incoming call or hang up an active call.
Speakerphone: Switch to Phone	 and 	Speakerphone mode: Hold down to switch the call to the connected phone.
Phono Mode	 and 	To use with a turntable with low audio output, plug in aux cable and hold down for 3 seconds. Input light will turn yellow.
Factory Reset	 +  + 	Hold down together for 5+ seconds to erase device memory and restore factory settings.